



TIPS 'N' TRICKS

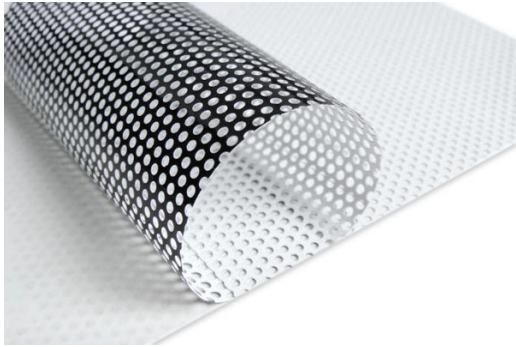

Installing and Removing Perforated Adhesive Vinyl

Installing:

- Clean window or glass surface thoroughly. Do not use cleaners such as Windex or others that contain harsh chemicals.
- Use masking tape for positioning before removing liner. There are several YouTube videos available to review for this method.
- **Important:** Pull liner downward horizontally at 180° from the facestock. Failure to do this will result in tearing the liner and or stretching/ripping the perforated vinyl.
- Ensure that the window temperature is between 50-80° Fahrenheit before and during installation. Do not install in direct sunlight.

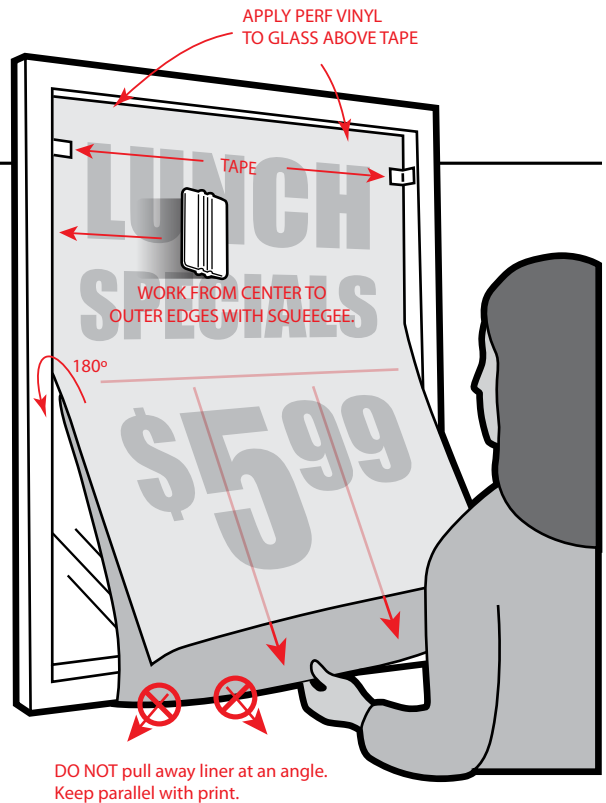

Removing:

- Use a blow dryer to remove stubborn perforated vinyl.
- Any remaining residue can be removed with solvents or orange oil based adhesive remover.

