


# TIPS 'N' TRICKS

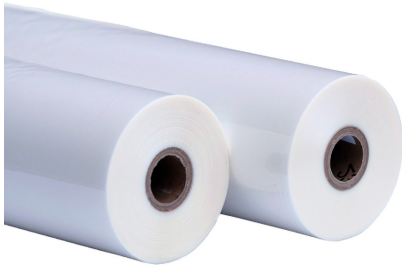

## Installing and Removing Adhesive Polypropylene

### Installing:

- Clean window or glass surface thoroughly. Do not use cleaners such as Windex or others that contain chemicals such as ammonia. These chemicals will react with the adhesive poorly.
- Using masking tape or similar; apply a piece on each side of the upper portion of the print. Cut the tape so half is left on the window frame and the other half remaining on the graphic. These pieces of tape will be used to register the position of the graphic quickly once the upper portion of the liner is removed.
- **Important:** Pull liner downward horizontally at 180° from the face stock. Failure to do this will result in tearing the liner and or ripping the substrate.
- Ensure that the window temperature is between 50-80° Fahrenheit before and during installation. Do not install in direct sunlight.
- Avoid dark graphics unless the window has been heat treated. Dark graphics will absorb more heat and will cause the glass to reach very high temperatures which may cause the glass to explode if not heat treated.

